

DSC-W5/W7/W15/W17

SERVICE MANUAL

LEVEL 2

Ver. 1.5 2007.09

Revision History

How to use
Acrobat Reader



Photo: DSC-W5/Silver

DSC-W5/W7

US Model
Canadian Model
Argentine Model
Brazilian Model
Japanese Model

DSC-W5/W7/W15/W17

AEP Model
UK Model
E Model
Australian Model
Hong Kong Model
Korea Model
Tourist Model

DSC-W5/W7/W15

Chinese Model

Click here to download
the full version.

Link

SPECIFICATIONS	BLOCK DIAGRAMS	PRINTED WIRING BOARDS
SERVICE NOTE	FRAME SCHEMATIC DIAGRAM	REPAIR PARTS LIST
DISASSEMBLY	SCHEMATIC DIAGRAMS	

- For ADJUSTMENTS (SECTION 6), refer to SERVICE MANUAL, ADJ (9-876-856-51).
- For INSTRUCTION MANUAL, refer to SERVICE MANUAL, LEVEL 1 (9-876-856-41).
- This service manual contains information for Japanese model as well.
- Reference No. search on printed wiring boards is available.
- Table for Differences of Function of Each Model
- Note in Lens Frame Installation
- Method for Copying or Erasing the Data in Internal Memory.
- Exchange Method of Barrier Assy

On the CH-168 and SY-001 boards

This service manual provides the information that is premised the circuit board replacement service and not intended repair inside the CH-168 and SY-001 boards.

Therefore, schematic diagram, printed wiring board and electrical parts list of the CH-168 and SY-001 boards are not shown.

The following pages are not shown.

Schematic diagrams	Pages 4-11 to 4-30
Printed wiring boards	Pages 4-39 to 4-42
Waveforms	Pages 4-45 and 4-46
Mounted parts location	Pages 4-48
Electrical parts list	Pages 5-7 and 5-9 to 5-12

The above-described information is shown in service manual Level 3.

DIGITAL STILL CAMERA

SONY®